


SET UP


ARENA




PORTABLE DISPLAYS

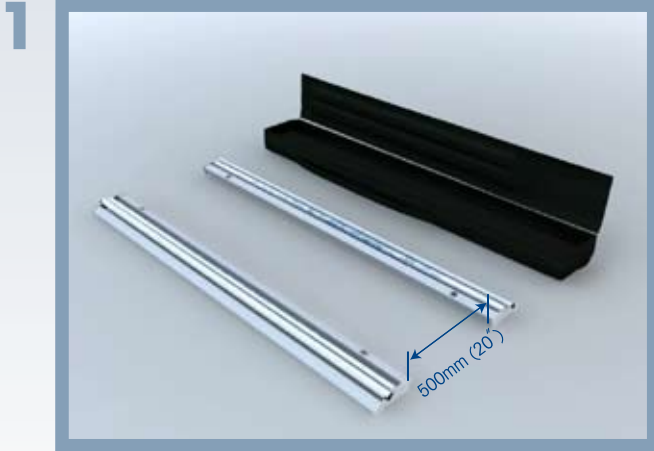

Take the two cassettes out of the bag and place them on a flat surface with a spacing of about 500 mm / 20 inches.

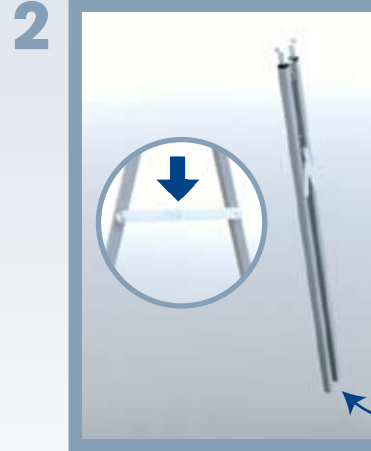

Fold out the two supporting legs.
Extend the legs to ensure they are locked into position.

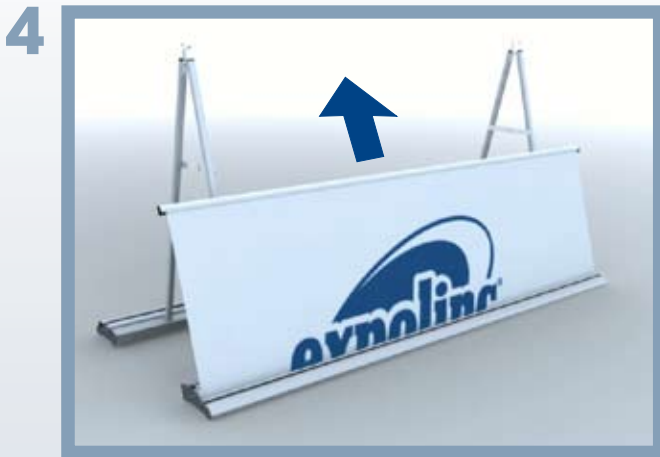

Take hold of top profile and pull up the graphic panel.




Attach the supporting legs to the end of the top profile.
Repeat steps 4 and 5 for the other side.



legs.

that the supporting legs are

3

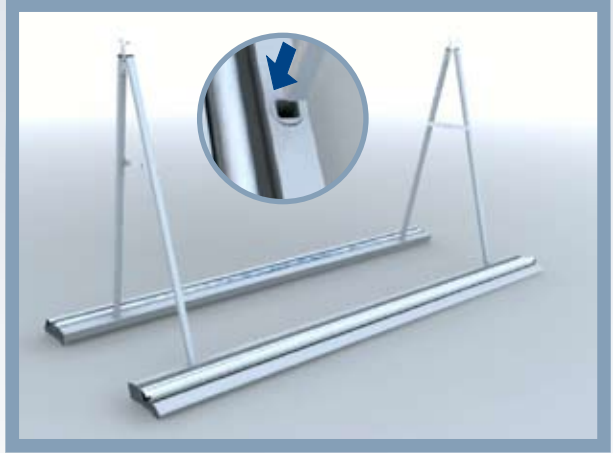

If necessary, adjust the distance between the cassettes.

Insert the supporting legs into the cups located on the cassettes.



to the brackets found at each

other side.

6



Verify that the system is level.

